


Pn# - SPLB69D2 / PLB69D2- 8pc Line Set.
 Pn# - SOCB69D2 / OCB69D2- 8pc Line Set.
 Pn# - SBKB69D2 / BKB69D2- 8pc Line Set.

1969-72 Pontiac Lemans / GTO
 1969-72 Oldsmobile Cutlass / 442
 1969-72 Buick Skylark / GS
 Conversion Power Disc
CONVERTIBLE.

Inline tube
The Professional Restorers #1 Choice
 Tech Support 586 532 1338

This kit works will most all conversions on the market, it mounts the brass 5 port valve under the mastercylinder on a bracket.

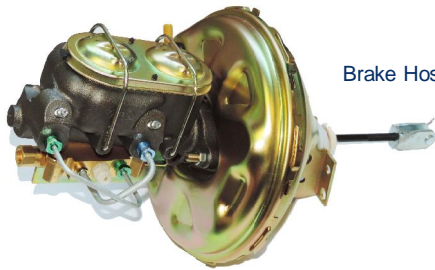

This is the direction of the valve mounting


BRK03



Master Cylinder to Prop Valve Mounted Under the MC, These come in the conversion kit.

Valve End Brake Hose End
 LNK10/11

MC Side
 Green 1/2-20
 Blue 9/16-18
 all GM Master Cylinders

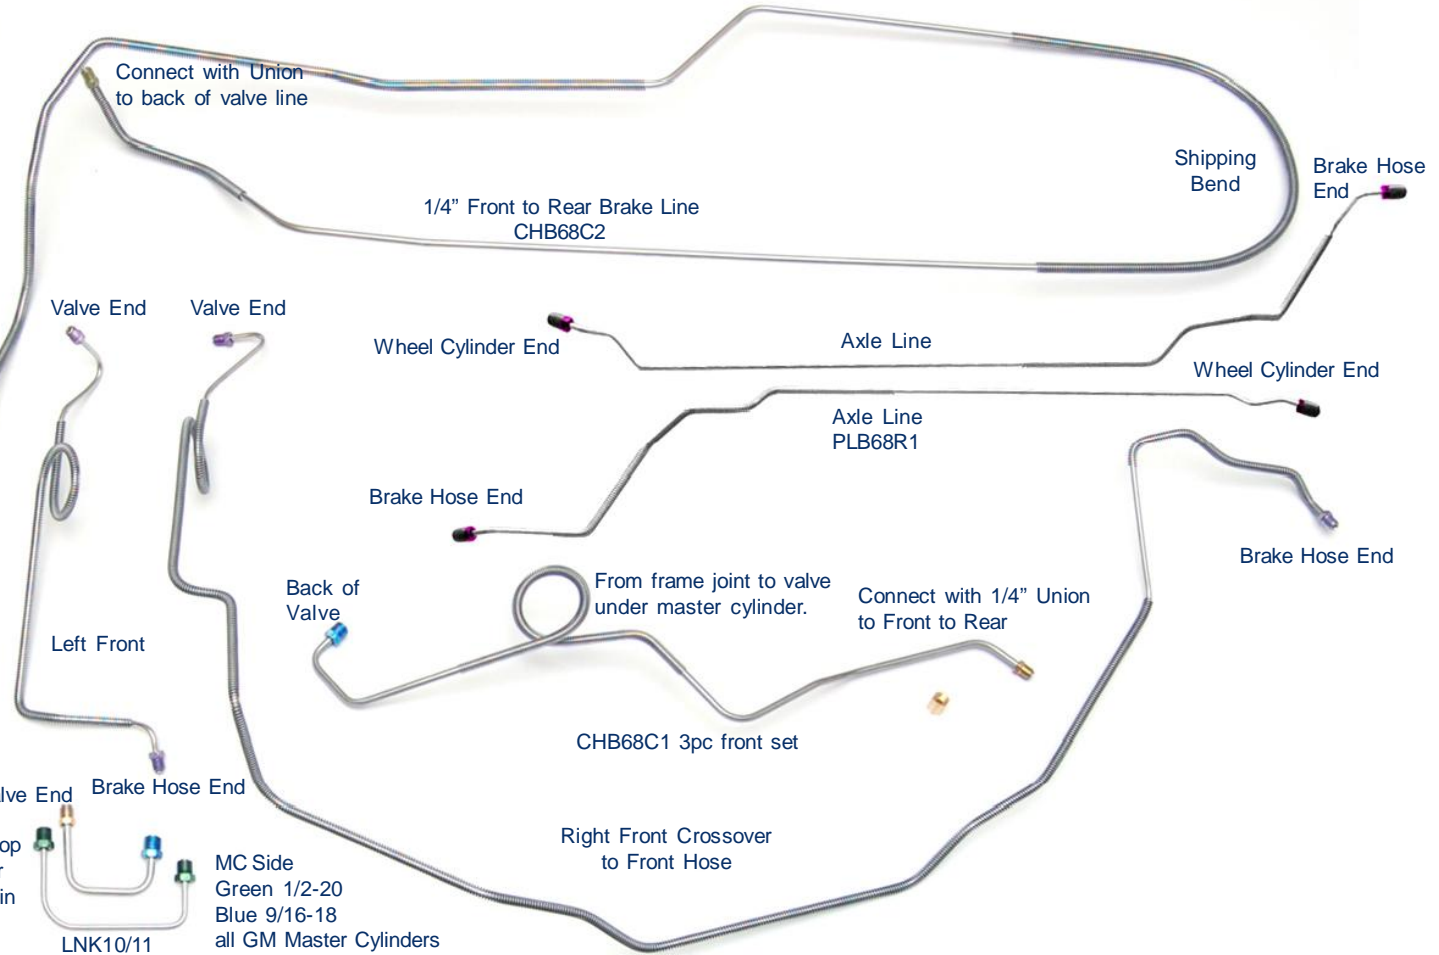

This is a disc brake conversion line set for cars that have been converted to disc brakes. It is designed to hold the valve under the master cylinder away from the frame and exhaust manifold heat and clearance. If you do not have the correct valve bracket it is part number BRK03.

